



DEACTIVATION

To deactivate the EM Magnetic Media Strip ("tag"), align the "OFF" side of the Handstamp with the EM strip and, using a straight up and down "stamping" motion, just touch the strip.

DO NOT allow the Handstamp to move in a side to side direction while it is in contact with the strip.

REACTIVATION

To reactivate the EM Magnetic Media Strip ("tag"), align the "ON" side of the Handstamp with the EM strip and, with a straight forward or backward motion, slide the Handstamp along the long axis of the strip. Make certain the Handstamp remains absolutely parallel with the strip while the two are in contact.

For libraries using 3M Magnetic Media Strips, we recommend that you slide the Handstamp both back and forth, i.e., twice, for best reactivation.

